


SPECIFICATION

LED Panel Light

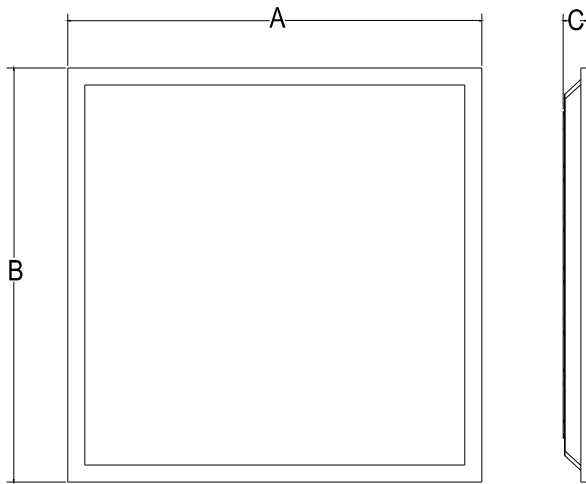

| Maximum overall | A | B | C |
|-----------------|--------|-------|------|
| 2*2ft | 603mm | 603mm | 35mm |
| 2*4ft | 1213mm | 603mm | 35mm |



FEATURES

Input voltage: AC100-277V

Operating frequency: 50/60Hz

Power factor: > 0.95

Ambient temperature range: -20°C ~+45°C

Color Temp: 3000-5000K

Dimmable: 3-in-1 dimming

THD: ≤10%

IP Rating: IP40

CRI: >Ra80

Beam angle: 120°



- Luminous Flux:>125lm/w
- Housing material:6063-T5
- 5 years' warranty

ETL & DLC Premium


PARAMETER

| Length | Product code | Certification | CRI | Wattage | Description Function | Lumens 3000-5000K | Packing/carton | G.W./carton |
|--------|-----------------|-----------------|-----|---------|------------------------------|----------------------|---|-------------|
| 2*2FT | ZS-BL2*2-F35-CC | ETL/cETLus,DLC, | >80 | 35W | 3-in-1 dimming(0-10V;PWM;Rx) | 3125 LM | 650*250*650mm 6 pieces 1*40HQ Loading=3888pcs | 14kg |
| | ZS-BL2*4-F40-CC | ETL/cETLus,DLC, | >80 | 40W | 3-in-1 dimming(0-10V;PWM;Rx) | 5000 LM | | |
| 2*4FT | ZS-BL2*4-F44-CC | ETL/cETLus,DLC, | >80 | 44W | 3-in-1 dimming(0-10V;PWM;Rx) | 5500 LM | 1260*250*650mm 6 pieces 1*40HQ Loading=1944pcs | 26.5kg |
| | ZS-BL2*4-F49-CC | ETL/cETLus,DLC, | >80 | 49W | 3-in-1 dimming(0-10V;PWM;Rx) | 6125 LM | | |
| | ZS-BL2*4-F72-CC | ETL/cETLus,DLC, | >80 | 72W | 3-in-1 dimming(0-10V;PWM;Rx) | 9000 LM | | |

MOUNTING GUIDES

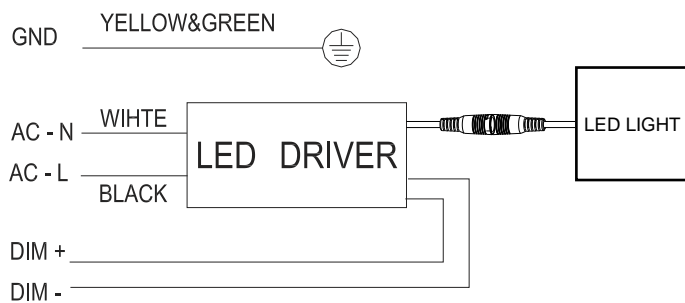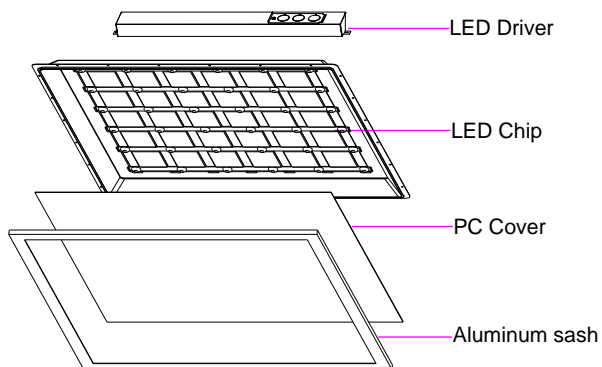

INSTALLATION INSTRUCTION

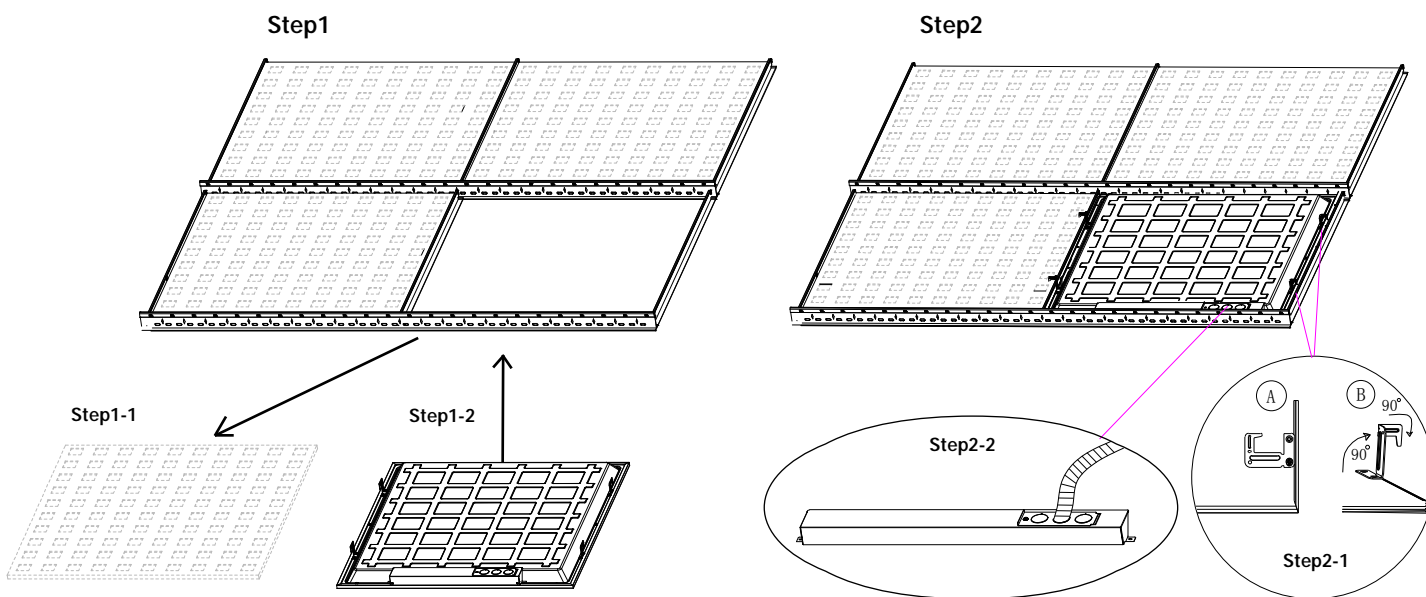

Step 1: Make sure of all the power is off before installing. Remove the one ceiling tile that you need to install light fixture on. Then place the light fixture on the T-bar carefully and make sure it is correctly in place and secure.

Step 2: Lift the 4 buckles on the back of the panel up by 90° then bend the top part of the buckles 90° towards the direction where you can anchor the light fixture to the T-bar.

Step 3: Place the driver on top of the lighting fixture in the back. Connect the cable between the driver and the lighting fixture. Open the driver's junction box and connect the AC wire to the driver correctly (L=black & N=white)

Warning:

Make sure all the power is off before installation.

All the installations are required to be done by professionals.